 


Speed 11S

ORIGINALITY DESIGN SMART - AND BEAUTIFUL

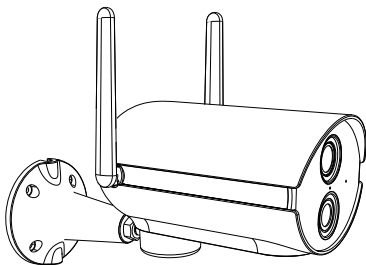

QUICK GUIDE



What's in the box

Please consult this checklist for all parts.



Speed 11S



Bracket



Screws



Power adapter

 


Wrench




User manual

Description

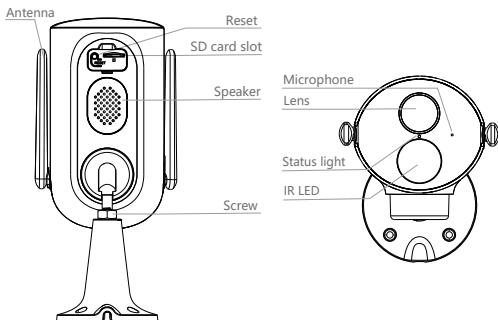


| | |
|--------------|---|
| Power | DC 12V/1A |
| Microphone | Capture sound for your video |
| Status light | <ul style="list-style-type: none">• Solid red light on: network is malfunctional• Blinking red light: wait for network connection (slowly blinking) connecting the network (quickly blinking)• Solid blue light on: the camera is working correctly |
| SD card slot | Support local SD card storage (Max.128G) |
| Reset | Press and hold on for 5 seconds to reset the camera |

 Bracket Installation




①

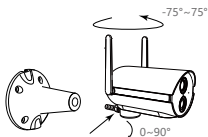 

After fixing your camera,
please lock this screw

 ②

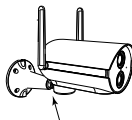

When adjusting your camera angle,
please lock this screw
(Optional)

1. Fix the bracket on the wall
2. Install the camera in the bracket and lock it with the screw

Download

CloudEdge is available for both iOS and Android OS. Search the name 'CloudEdge' in App Store or Google Play, or scan the QR-Code to download the App.

Support



Add device

Log in the CloudEdge, select "Add Device", and add the smart camera to the App according to the screen tips(Make the smart camera close to the router when configuring).



NOTE: If you need to re-select the WiFi network, please press and hold the "RESET" button for 5 seconds, the device will restart, and the indicator will be flashing red.

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of devices after resetting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.

Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

Functions

Pan/Tilt

You can rotate the camera horizontally by the App on your smartphone, and adjust vertical angle manually, so that you can get a wide vision.

Video flip

Flip your video stream up or down for maximum flexibility.

Motion detection

 
The camera can detect movements, and then send you push notifications and app alerts.

Record

Support 24H continuous recording with high capacity SD storage.

Day & Night

Never miss a moment, even in complete darkness, with powerful night-vision technology.

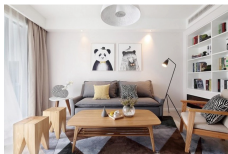

Daytime



Night