Flight 7S

ORIGINALITY DESIGN SMART - AND BEAUTIFUL

· · · · · · · · · · · · · ·

CAMERA

CE FC RoHS

QUICK GUIDE
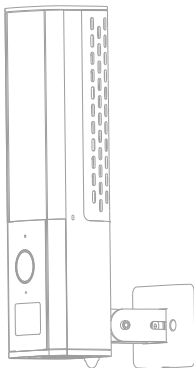
Consult the checklist below for all components.

Flight 7S

Bracket

Bracket screws

Screw driver

User manual

Description

Light
Status light
SD card slot
RESET button
Lens
MIC
Speaker
PIR sensor

| Power	AC 100~240V
Status light	• Solid red light on: network is malfunctional
	• Blinking red light: wait for network connection (slowly blinking)
	connecting the network (fast blinking)
	• Solid blue light on: camera is working correctly
Microphone	Capture sounds for your video
SD card slot	Support local SD Card storage (Max.128G)
Reset	Press and hold the 'RESET' for 5 seconds to reset the device (if you have modified settings, they will return to factory defaults)
Light	Turn the light on/off manually or automatically. And you can adjust brightness by App.

Bracket Installation
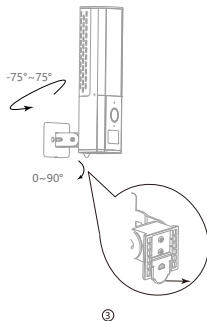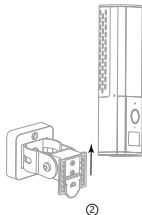
1. Fix the bracket on the wall.

2. Insert the barckert upward to lock with the bracket with the camera.

3. (Optional) You can adjust the camera horizontally or vertically. We recommend to adjust camera horizontally between 0 to 150 degrees, and vertically bewtween 15 to 20 degrees.

   (Optional) Push the iron part of the bracket and push the bracket downward to uninstall the bracket.

-75°~75°

0~90°

Download

CloudEdge is available for both iOS and Android OS. Search the name 'CloudEdge'in App Store or Google Play, or scan the QR-Code to download the App.

·Support

| Ipad | iOS | Android | Download App(iOS&android) |

Add device

Log in the CloudEdge, select "Add Device", and add the smart camera to the App according to the screen tips(Make the smart camera close to the router when configuring).

NOTE:If you need to re-select the WiFi network, please press and hold the "RESET" button for 5 seconds, the device will restart, and the indicator will be flashing red.

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of devices after reseting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.

Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened;Message notification and authority confirmation in the mobile phone system have been opened.

Lighting Control

You can turn the light on or off with time setting or PIR, and you can adjust brightness by App.

Two-way Audio

You can see and hear the vistor in your App from the camera.

PIR

When the camera detects someone stopping by, it sends an alarm message to your cell phone.

Record

Using SD card or activating the Cloud-Storage Service to keep recording for every moment.

Day & Night

Powerful night vision without any interruption, even in complete darkness.

Daytime   Night